


THE ADDITIONAL CONCRETE
REQUIRED WILL BE DETERMINED
BY THE DIMENSIONS OF THE PILLAR
YOU DECIDE TO USE.

DRIVEWAY GATE PILLAR AND PAD LAYOUT DIAGRAM

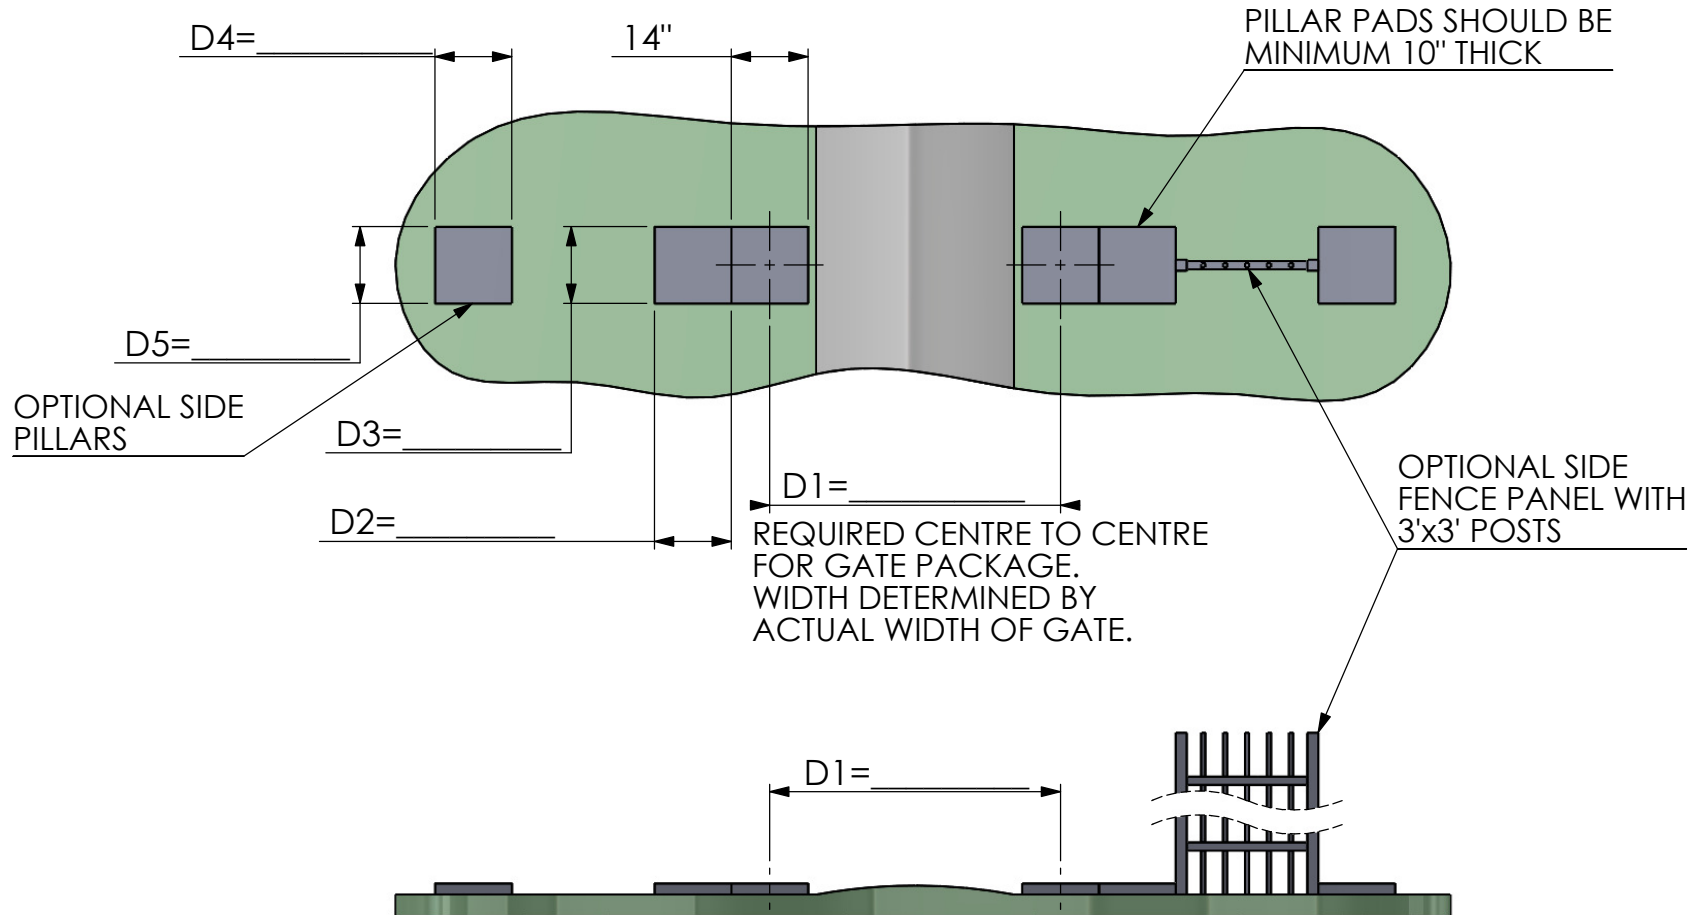

- 1) FIND THE CENTRE TO CENTRE OF YOUR DRIVEWAY GATE PILLINGS
ACCORDING TO THE WIDTH OF THE GATE.
- 2) ADD THE FINISHED PILLAR DIMENSIONS PLUS 4".
- 3) POUR AS ONE COMPLETE PAD FOR BOTH GATE AND PILLARS TO SIT ON.



Heavenly Gates 8736-61 Ave. Edmonton, AB, Canada
T6E 5P6 Ph. (780) 490-4283 heavenlygates@telus.net Fax (780) 490-4285